



# Installation

Model specific instructions

For:

- KTM EXC-F 250 (2011 and newer)
- KTM EXC-F 350
- KTM EXC-F 450
- KTM EXC-F 500
- Husqvarna FE250
- Husqvarna FE350
- Husqvarna FE450
- Husqvarna FE501

These instructions are a model specific add-on to the general BoosterPlug installation instructions.

The general BoosterPlug installation instructions can be found in the "Downloads" section on the BoosterPlug.com website:

<http://www.boosterplug.com/shop/cms-downloads.html>

## Installation Tips

- Install the BoosterPlug module as per the general installation papers.
- The pictures below should help you locate the AIT sensor where the BoosterPlug is installed. (The red circle)
- The AIT sensor is located in the front left hand side of the air filter box.
- One of the connector cables is made longer than seen in the webshop pictures, to allow you to relocate the square BoosterPlug module to a safe position under the tank.
- You have several choices for the BoosterPlug sensor location, but our favorite place is near the steering head or under the head light. Next to the airbox snorkel air intake hole is another very good spot.
  - Just stick to the simple rules in the general installation instructions for placing the external sensor, and you'll be fine.

## Pictures

For:

- KTM EXC-F 250 (2011 and newer)
- KTM EXC-F 350
- KTM EXC-F 450
- KTM EXC-F 500
- Husqvarna FE250
- Husqvarna FE350
- Husqvarna FE450
- Husqvarna FE501

