



# Installation

Model specific instructions

For:

- **Ducati Scrambler (800cc) (All)**
- **Ducati Scrambler Sixty2 (All)**
- **Ducati Scrambler 1100 (All)**

These instructions are a model specific add-on to the general BoosterPlug installation instructions.

The general BoosterPlug installation instructions can be found in the "Downloads" section on the BoosterPlug.com website:

<http://www.boosterplug.com/shop/cms-downloads.html>

## Installation Tips

- The pictures below should help you locate the AIT sensor where the BoosterPlug is installed.
- Install the BoosterPlug module as per the general installation papers.
- You will need to remove or lift the fuel tank to get access the the AIT sensor
- On the Scrambler (800cc) and the Scrambler Sixti2, the AIT sensor is located on the right hand side of the airfilter box.
- On the Scrambler 1100, the AIT sensor is located on the upper left hand side of the air filter box.
- You have several choices for the BoosterPlug sensor location, but our favorite place is near the steering head or under the head light. Just stick to the simple rules in the general installation instructions for placing the external sensor, and you'll be fine.

## Pictures

For:

- **Ducati Scrambler (800cc) (All versions)**
- **Ducati Scrambler Sixty2 (All versions)**



For:

- **Ducati Scrambler 1100 (All versions)**

