



# Installation

Model specific instructions

For:

- [Yamaha FZ1](#)
- [Yamaha FZ1 Fazer](#)

These instructions are a model specific add-on to the general BoosterPlug installation instructions.

The general BoosterPlug installation instructions can be found in the "Downloads" section on the [BoosterPlug.com](http://www.boosterplug.com) website:

<http://www.boosterplug.com/shop/cms-downloads.html>

## Installation Tips

- Install the BoosterPlug module as per the general installation papers.
- The picture below should help you locate the AIT sensor where the BoosterPlug is installed.
- Remove the front tank cover and the seat.
- Remove fuel tank to access the AIT sensor in the air box..
- The AIT sensor is located in the top of the air filter box (See pictures below).
- The BoosterPlug module must be placed behind the air box. (There is not sufficient room for it on top of the air box when the tank is reinstalled) The connector cables on the BoosterPlug module are made a bit longer than usual to allow for this.
- You have several choices for the BoosterPlug sensor location, but our favorite place is near the steering head or under the head light. Next to the airbox snorkel air intake hole is another very good spot.
  - Just stick to the simple rules in the general installation instructions for placing the external sensor, and you'll be fine.

## Pictures

For:

- [Yamaha FZ1](#)
- [Yamaha FZ1 Fazer](#)

