



Installation

Model specific instructions

For Harley Davidson Sportster models:

- XL883 Sportster 883
- XL883L Sportster 883 Low
- XL883L Sportster 883 Super Low
- XL883R Sportster 883 R
- XL883C Sportster 883 Custom
- XL883N Sportster 883 Iron
- XL1200N Sportster 1200 Nightster
- XL1200L Sportster 1200 Low
- XL1200T Sportster 1200 Super Low
- XL1200R Sportster 1200 Roadster
- XL1200CX Sportster 1200 Roadster
- XL1200C Sportster 1200 Custom
- XL1200CB Sportster 1200 Custom Limited
- XL1200X Sportster 1200 Forty-Eight
- XL1200V Sportster 1200 Seventy-Two
- XR1200 XR1200X

These instructions are a model specific add-on to the general BoosterPlug installation instructions.

The general BoosterPlug installation instructions can be found in the "Downloads" section on the BoosterPlug.com website:

<http://www.boosterplug.com/shop/cms-downloads.html>


Installation Tips

- Install the BoosterPlug module as per the general installation papers.
- The picture below should help you locate the AIT sensor where the BoosterPlug is installed.
 - The AIT sensor is found in the throttle valve body between the cylinder heads.
 - Remove the air filter assembly to get access to the AIT sensor.
- You have several choices for the BoosterPlug sensor location, but our favorite place is near the steering head or under the head light.
 - Just stick to the simple rules in the general installation instructions for placing the external sensor, and you'll be fine.

Pictures

For:

- All Sportster 883 models
- All Sportster 1200 Models

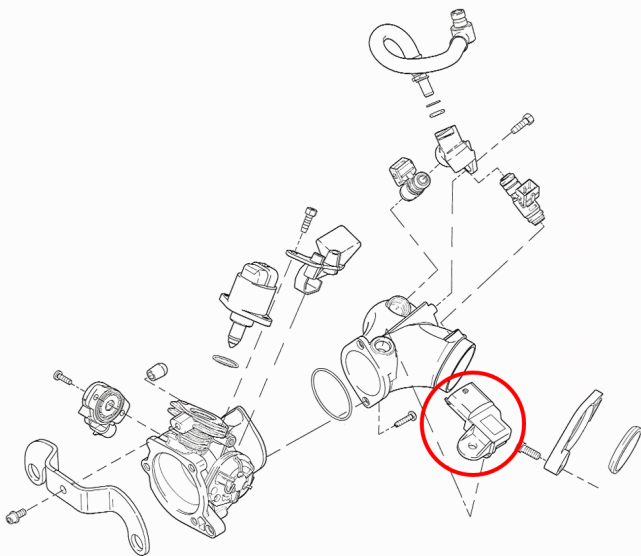

For:

- XR1200X

